SHINYBOW™ USA

MULTIMEDIA AUDIO AND VISUAL

INSTRUCTION MANUAL

MODEL : SB-5688LCM-CT

8x8 HDMI-HDBASET MATRIX SWITCHER

8x8 HDMI-HDBaseT Matrix Switch with Extension

HDMI-HDBaseT MATRIX SWITCHER SERIES

Thank you for purchasing the SB-5688CT HDMI-HDBaseT Matrix Switcher. You will find this unit easy to install and highly reliable but it is essential that you read this manual throughly before attempting to use 8x8 HDMI-HDBaseT Matrix switcher.

SAFETY INFORMATION

1. To ensure the best results from this product, please read this manual and all other documentation before operating your equipment. Retain all documentation for future reference.
2. Follow all instructions printed on unit chassis for proper operation.
3. To reduce the risk of fire, do not spill water or other liquids into or on the unit, or operate the unit while standing in liquid.
4. Make sure power outlets conform to the power requirements listed on the back of the unit. Keep unit protected from rain, water and excessive moisture.
5. Do not attempt to clean the unit with chemical solvents or aerosol cleaners, as this may damage the unit. Dust with a clean dry cloth.
6. Do not use the unit if the electrical power cord is frayed or broken. The power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords and plugs, convenience receptacles, and the point where they exit from the appliance.
7. Do not force switched or external connections in any way. They should all connect easily, without needing to be forced.
8. Always operate the unit with the AC ground wire connected to the electrical system ground. Precautions should be taken so that the means of grounding of a piece of equipment is not defeated.
9. AC voltage must be correct and the same as that printed on the rear of the unit. Damage caused by connection to improper AC voltage is not covered by any warranty.
10. Turn power off and disconnect unit from AC current before making connections.
11. Never hold a power switch in the “ON” position.
12. This unit should be installed in a cool dry place, away from sources of excessive heat, vibration, dust, moisture and cold. Do not use the unit near stoves, heat registers, radiators, or other heat producing devices.
13. Do not block fan intake or exhaust ports. Do not operate equipment on a surface or in an environment which may impede the normal flow of air around the unit, such as a bed, rug, carpet, or completely enclosed rack. If the unit is used in an extremely dusty or smoky environment, the unit should be periodically “blown free” of foreign dust and matter.
14. To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside. Refer all servicing to qualified service personnel. There are no user serviceable parts inside.
15. When moving the unit, disconnect input ports first, then remove the power cable; finally, disconnect the interconnecting cables to other devices.
16. Do not drive the inputs with a signal level greater than that required to drive equipment to full output.
17. The equipment power cord should be unplugged from the outlet when left unused for a long period of time.
18. Save the carton and packing material even if the equipment has arrived in good condition. Should you ever need to ship the unit, use only the original factory packing.
19. Service Information Equipment should be serviced by qualifier service personnel when:
    A. The power supply cord or the plug has been damaged.
    B. Objects have fallen, or liquid has been spilled into the equipment.
    C. The equipment has been exposed to rain
    D. The equipment does not appear to operate normally, or exhibits a marked change in performance
    E. The equipment has been dropped, or the enclosure damaged.

TABLE OF CONTENTS

CONTENTS

INTRODUCTION 1
PACKAGE CONTENTS 2
FEATURES 2
SPECIFICATIONS 3
FRONT PANEL 4
REAR PANEL 7
REMOTE CONTROL 9
EDID FUNCTION 13
TYPICAL APPLICATION 16
IR EXTENDER 19
RS-232 SERIAL INTERFACE 21

INTRODUCTION

The SB-5688LCM-CT is high-performance 8x8 matrix routing switcher with eight (8) HDMI inputs and supports simultaneously eight (8) HDMI and eight (8) CATx outputs. The SB-5688LCM-CT is based on HDBaseT technology and that supports full resolution HDMI Video with embedded audio, RS-232, and IR bi-directional, all over a single CATx cable. With a signal bandwidth of 340Mhz, there is no signal degradation. High Definition Digital signals can be selected and distributed to any 16 outputs simultaneously (8x channels x2). The Switcher is certified as being fully HDMI and HDCP 2.2 compliant, HDMI V1.4a 3D formats, data rates up to 6.75 Gbps. Supports UXGA/WUXGA/DVI 1920x1200 resolution to any HD displays. The SB-5688CT has one CAT6/CAT6a and HDMI connector for each output, effectively making this an 8x16 switcher (same signal on both outputs). (1) RJ-45 connection on each output extends the HDMI signal to remote location via HDBaseT CATx cable extend to HDBaseT Receiver. The EDID can be selected between eight (8) different modes. Control is provided via Front panel push buttons, IR remote or via RS-232 or TCP/IP (not a web-browser). An RS-232 Windows GUI interface is provided for matrix routing.

SAFETY PRECAUTIONS

Please read all instructions before attempting to unpack, install or operate this equipment and before connecting the power supply. Please keep the following in mind as you unpack and install this equipment:

- Always follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Never spill liquid of any kind on or into this product.
- Never push an object of any kind into this product through any openings or empty slots in the unit, as you may damage parts inside the unit.
- Do not attach the power supply cabling to building surfaces.
- Use only the supplied power supply unit (PSU). Do not use the PSU if it is damaged.
- Do not allow anything to rest on the power cabling or allow any weight to be placed upon it or any person walk on it.
- To protect the unit from overheating, do not block any vents or openings in the unit housing that provide ventilation and allow for sufficient space for air to circulate around the unit.

DISCLAIMERS

The information in this manual has been carefully checked and is believed to be accurate. We assume no responsibility for any infringements of patents or other rights of third parties which may result from its use.

We assume no responsibility for any inaccuracies that may be contained in this document. We make no commitment to update or to keep current the information contained in this document.

We reserve the right to make improvements to this document and/or product at any time and without notice.

COPYRIGHT NOTICE

No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or any of its part translated into any language or computer file, in any form or by any means — electronic, mechanical, magnetic, optical, chemical, manual, or otherwise — without express written permission and consent

© Copyright 1997. All Rights Reserved.

Version 2.0 OCT 2014

TRADEMARK ACKNOWLEDGMENTS

All products or service names mentioned in this document may be trademarks of the companies with which they are associated.

FEATURES

PACKAGE CONTENTS

Check that you have the following components;

- SB-5688LCM-CT Matrix Switcher
- RS-232 V2.0 Protocol Instructions
- Ethernet V2.0 Protocol Instructions
- Master wireless IR Remote Control (SW-5688)
- (8) Individual wireless IR Control (SW-5688CT-IR01~IR08)
- 19 inch Ear mount bracket (Part # 2U-440L)
- SB-101 IR Extender distance ~984 ft (300M) Transmitter set
- SB-100 IR Extender distance ~984 feet (300M) Receiver set
- SB-101C IR Extender distance 6ft(2M) Transmitter Cable
- SB-100C IR Extender distance 6ft(2M) Receiver Cable
- CD Contents : This manual, Windows GUI, ISP V1.0
- Windows driver
- RS-232 Cable 6 feet (2M)
- ISO Screws
- Users Guide
- Worldwide Universal Power Supply 100~240 VAC, AC 50/60Hz

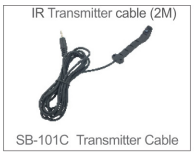

Based on HDBaseT, bi-directional IR, RS-232, Multi format Audio, Ethernet and full resolution HD Video all, signals over CAT5e/6/7 cable.

FEATURES

- 8x HDMI source devices matrix switched to 8x HDMI and 8x CAT 5e/6/7 Extender output devices.
- Application HDBaseT Specification for IR, RS-232, Multi Audio Format and HD Video Signals over CATx.
- HDMI digital Video w/ embedded Audio, DVI format and CEC/HDCP 2.0 compliant
- Worldwide control EDID modes for HD Video resolutions.
- Link speeds of up to 6.75 Gbps (link clock rate of 340MbHz), Support HDMI 1.4a 3D formats.
- Wide range of HD resolutions from PC XGA to WUXGA 1920x1200 and HDTV/DTV HDMI resolutions 480i/480p, 576i/576p, 720p, 1080i & 1080p
- Compatible with all HDMI source devices, PC monitors, Plasma HD display, HDTV and audio receivers or audio amplifiers.
- Digital Video TMDS formats Resolution up to 1080p-60 with Deep color 36-bit.
- Digital Audio Support: Dolby TrueHD, Dolby Digital, Dolby Digital Plug/ex, DTS, DTS-HD, DTS-HD Master, DTS-EX, PCM, PCM2, LPCM2
- Audio Input : Support HDMI digital audio.
- Audio Output : Support HDMI digital Audio with Multi-Audio.
- Various User Interface control:
  - Windows based GUI control via RS-232 port
  - Front Panel push button
  - IR wireless remote control
  - Ethernet Switcher control
  - Third party RS-232 controller (via simple ASCII)
- Support world wide control functions: ALL/OFF/RECALL/ENTER/MEMORY/EDID/LOCK
- Support EDID modes :
  - Embedded EDID modes : FSS/H24-3D/H24-3D-M/H36-3D/H36-3D-M/DVI-D 1280x1024-60Hz/DVI-D 1920x1200-60Hz/AUTO
  - External modes : Learning mode
- Automatic scanning input & output status via LED show on front panel.
- Support IR Remote and IR Extender with distance up to ~ 1000ft (300M) Maximum.
- EDID configuration via Internal modes.

The Switcher will remember that last state during a power cycle. When power is removed and resorted, the last configuration will be invoked.

SPECIFICATIONS

SPECIFICATIONS

- **Type of HDMI Switcher:** 8x HDMI inputs To 8x HDMI + 8x HDBaseT Outputs Matrix Switcher
- **HDMI Support:** HD 1080p-@60Hz, H36-bit Deep color, 3D (1.4a) formats
- **HDCP / CEC Support:** HDCP 2.0 Compliant, CEC Compliant
- **Video Bandwidth:** Double Data Rates: 340Mhz, Total 6.75Gbps bandwidth
- **Digital Video Support:** HD:480i/ 480p/ 720p/ 1080i/ 1080p up to 36bit deep color
- **Inputs 8x HDMI Sources:**
  - 8x HDMI Sources
  - 8x IR in (IR signal To 8x Rooms each - Via HDBaseT CATx cable)
  - 1x ALL IR in (IR to Room - Via HDBaseT CATx cable)
  - 8x RS-232 (I/O To 8x Rooms - Via HDBaseT CATx cable)
  - 1x IR Ext. in (Switch control)
  - 1x RS-232 (Switch control)
  - 1x Ethernet (Switch control)
- **Outputs 8x HDMI Destinations:**
  - 8x HDMI Destinations
  - 8x CATx (HDBaseT Based via category 6/6a/7 cable)
  - 1x ALL IR out (IR signals from Room - Via HDBaseT CATx cable)
  - 8x IR out (IR signal from 8x Rooms each - Via HDBaseT CATx cable)
  - 8x RS-232 (I/O From 8x Rooms each - Via HDBaseT CATx cable)
- **Digital Audio Support:**
  - Multi Audio Formats 5.1 / 7.1, MAT(MLP)
  - Dolby Digital,
  - Dolby TrueHD,
  - Dolby Digital Plus,
  - DTS, DTS-ES 6CH,
  - DTS-HD, DTS-HD-HRA, DTS-HD Master,
  - (PCM-2CH)
- **Controls:**
  - 1x IR Remote Controller (remote switcher)
  - 8x IR Room Remote Controller
  - 1x Select & Function buttons on front panel
  - 1x IR External port (switch control)
  - 1x RS 232 series interface (switch control)
  - 1x Ethernet series interface (switch control)
- **Source Status:** Automatically Scan Sources Inputs via LED show out
- **Function Control Key:** ALL / OFF / RECALL / ENTER / MEMORY / LOCK / EDID
- **(8) EDID management:** Select Embedded EDID : Mode1: FSS, Mode2: H24-3D, Mode3: H24-3D-M, Mode4: H36-3D, Mode5: H36-3D-M, Mode6: DVI-D 1280x1024-60Hz, Mode7: DVI-D 1920x1200-60Hz, Mode8: AUTO
- **Infrared Frequency:** 38 Khz
- **IR External Distance:** ~1000 feet / 300 meters max
- **CAT5e/6 Extender Distance:** ~300 feet / 100 meters maximum.
- **HDMI I/O Connector:** HDMI Type A - SMD 19pin Female Type
- **Temperature:** 32 °F - 100 °F Operation (0°C - 38 °C)
- **Dimensions (LxWxH):** 19* x 9.85 x 3.5 in (*with rackmount bracket) (482 x 250 x 88 mm)
- **Rack Mount:** Rack Mount 2 RU High 19 ”Rack Mount (with rack mount)
- **Power Supply:** AC 100~240 VAC 50/60Hz (Power Consumption:10A Maximum)
- **Safety Approvals:** CE, FCC, RoHS, REACH
- **Product Weight:** 4.75 Kgs / 7.91 lb

As product improvements are continuous, specifications are subject to change without notice.

FRONT PANEL

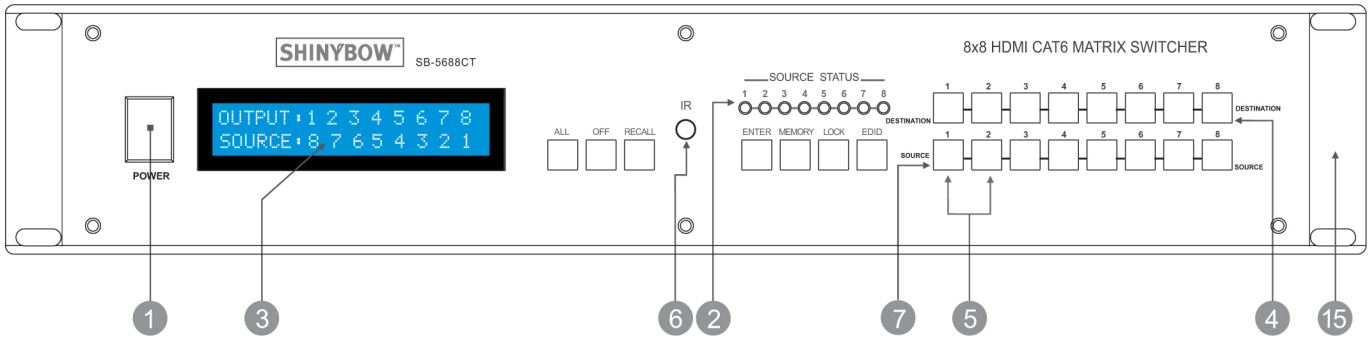

1. POWER SWITCH

The power switch turns the unit on and off. The LED will illuminate red to indicate that the switcher is ON and is receiving power.
The Switcher will remember that last state during a power cycle.
When power is removed and resorted, the last configuration will be evoked.

---

2. INPUT STATUS DISPLAY

Input sources 1 to 8 LED illuminates blue to indicate that a video source is present on that input.

---

3. OUTPUT STATUS DISPLAY

Each Output (destination) Channel shows which input (source) is assigned.

---

4. DESTINATION SELECT BUTTONS

Separate outputs 1 thru 8 select buttons are provided for each destination assignment. Routing can be Source to Destination or one source to multiple destinations. ***Example :*** Press Destination 1,3,5 then press Source 2 will route Input 2 to Output 1,3,5 respectfully.

---

5. EDID MODE SELECT BUTTONS

Used to select EDID mode using Input buttons #1 and #2.

---

6. IR SENSOR

The IR sensor receives IR commands from the supplied remote controller or third party IR emitter.

---

7. SOURCE SELECT BUTTONS

Separate inputs 1 thru 8 select buttons are provided each source selection.

---

15. 19 INCH EAR MOUNT PAIR

Converts desktop to 19 inch rack mount. Bracket (part # 2U-440L) INCLUDED. Image shows rack mount bracket attached.

FRONT PANEL

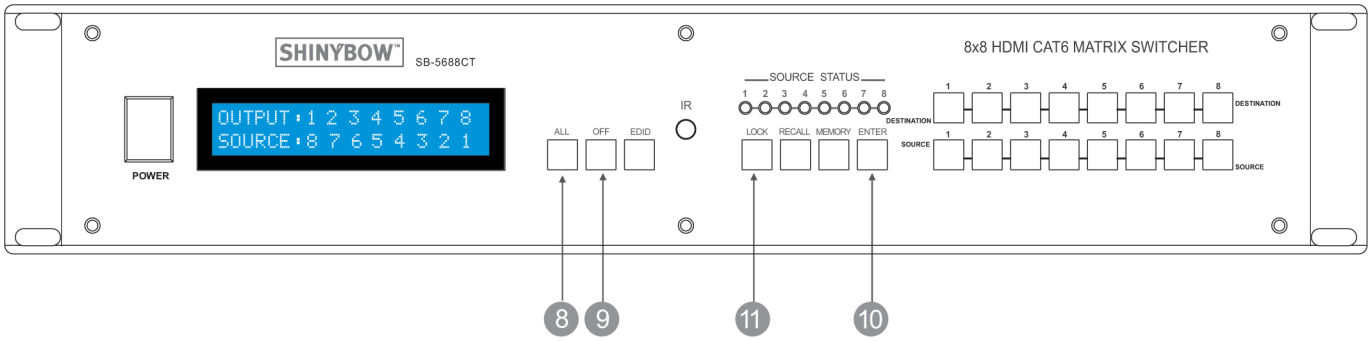

8. FUNCTION KEY - ALL

Disables (mute) video on all destinations OR Selects the same source to all destinations.
Option 1

- Press **ALL** followed by **OFF** button. The display will show " 0 " indicating all destinations have no video selected.

Option 2

- Press **ALL** followed by Source 1 thru 8. The display will show the Source selected.
- Press **ENTER** The pre-set source selection will be assigned all destinations.

---

9. FUNCTION KEY - OFF



Disables (mute) video to selected channels. Either destinations.

- Press **OFF** button followed by any Destination channel.
- Press 1 thru 8 output destination. The display will show " 0 " for the selected channel indicating no video selected.

---

10. FUNCTION KEY - ENTER

Press **ENTER** to confirm entries.

---

11. FUNCTION KEY - LOCK

- Press and hold **LOCK** button for two seconds lockout the front panel.
- Press and hold **LOCK** button for two seconds to enable the front panel.

FRONT PANEL

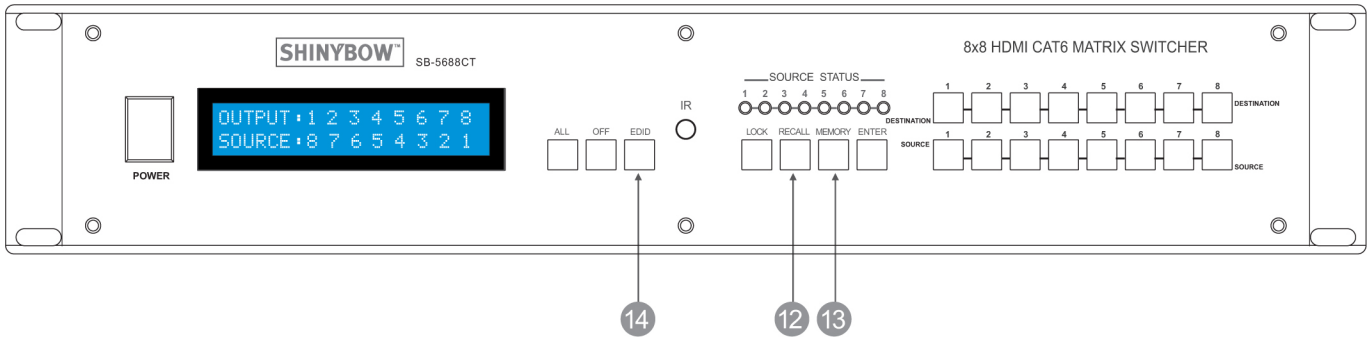

12. FUNCTION KEY - RECALL

The system will show previously stored presets, up to a total of 16.
Presets are stored in local memory using Source keys 1 thru 8 or Destination keys 1 thru 8 as the memory preset location.

- Press **RECALL** button.
- Press 1 thru 8 on either Source or Destination row.
- Press **ENTER** The pre-set configuration will execute.

Operation completes.
Note: Operation will abort if no keys are dressed within 5 seconds.

---

13. FUNCTION KEY - MEMORY



The system will show store presets, up to a total of 16.
Presets are stored in local memory using Source keys 1 thru 8 or Destination keys 1 thru 8 as the memory preset location.

- Configure desired matrices.
- Press **MEMORY** button.
- Press 1 thru 4 on either Source or Destination row.
- Press **ENTER** to ready memory location.
- Or press **MEMORY** again to cancel operation.

Operation completes.
Note : Operation will abort if no keys are pressed within 5 seconds.

---

14. FUNCTION KEY - EDID

- Press EDID to select new EDID mode or select source row #1 or #2 for LINK source EDID again.
- Press DESTINATION again, press the same DESTINATION # to learn CATx EDID, The EDID for CATx has been learned.

REAR PANEL

REAR PANEL

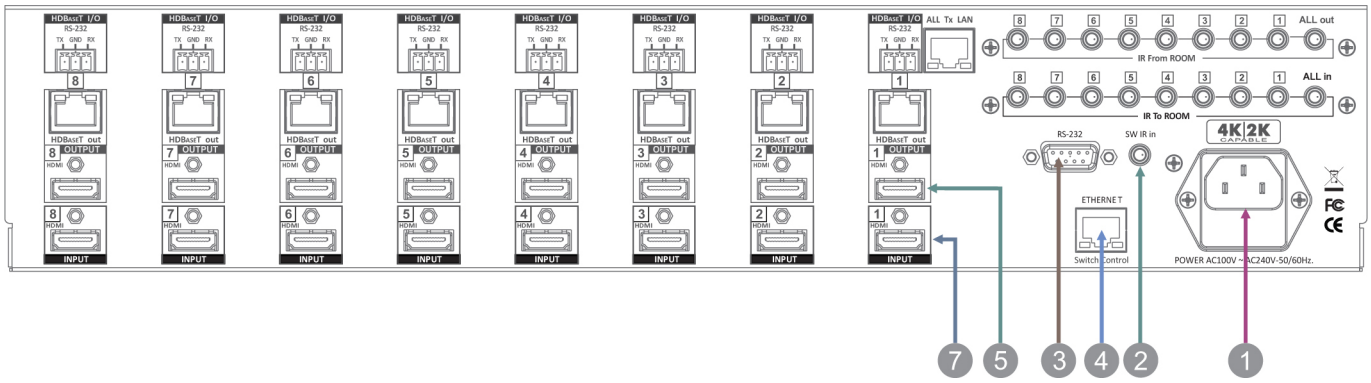

1. DC POWER INLET

The Switcher is fitted with a AC power plug input connector. Ensure that the used is of an approved type and is of sufficient current carrying connector capacity with the correct voltage and connector polarity. 1100~240Volt AC, 50/60Hz power supply.



Power Plug:
Power input - AC100~240V,50/60Hz, 10A

2. IR EXTENDER IN (EXT. IR TO CONTROL SWITCHER)

Support one of IR Extender to control Switcher. Extend distance maximum 300M / ~1000 ft. When you plug the External IR extender into the switcher, the front panel IR receiver remain active.

IR Extender Jack:
Female Jack - inner OD O 3.5 mm

3. RS-232 CONNECTION (SWITCHER)

RS-232 control port to allow for interfacing to a PC, Such as a computer or touch panel control, to the switcher via this DB-9pin Female connector for serial RS-232 control.



This port is also for firmware update.
Remote Port :
DB-9pin Female connector

4. ETHERNET CONNECTION

ETHERNET control port to allow for TCP/IP interfacing to a PC Such as a computer or touch panel control (not a web-browser), to the switcher via this RJ-45 Female connector to control switcher.

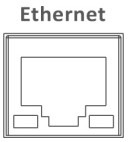

Remote Port : Control the switcher
RJ-45 Female connector
Ethernet Port:
Note: the Ethernet port and RS-232 port cannot be used simultaneously. Any connection to the Ethernet port will disable serial commands send to the RS-232 port.

5. OUTPUTS- 1,2,3,4,5,6,7 & 8 HDMI

Connect a signal link of HDMI direct digital video/audio to this Female HDMI connector. This connector supports HDMI digital video/audio and DVI digital video sources.

HDMI Digital Video/Audio, Connector with fix screw Output 1 ~ Output 8

HDMI digital video/audio connector:
HDMI Female connector.
Note: With the proper adapters, the switcher can be used with DVI digital video signals HDCP compliant.

6. INPUTS- 1,2,3,4,5,6,7, & 8 HDMI

Connect a signal link of HDMI direct digital video/audio to this Female HDMI connector. This connector supports HDMI digital video/audio and DVI digital video sources.

HDMI Digital Video/Audio, Connector with fix screw Input 1 ~ Input 8

HDMI digital video/audio connector:
HDMI Female connector.
Note: With the proper adapters, the switcher can be used with DVI digital video signals HDCP compliant.

REAR PANEL

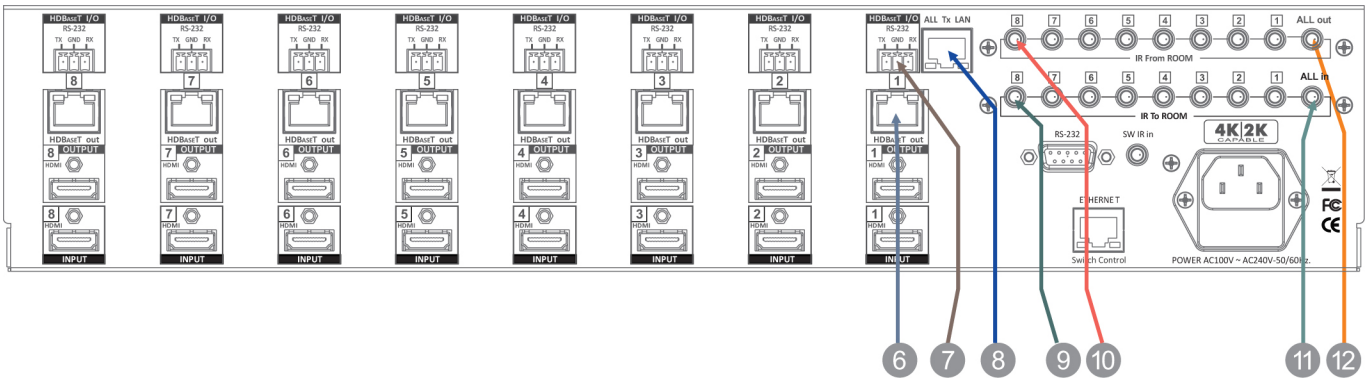

6. OUTPUT - 1,2,3,4,5,6,7 & 8 HDBaseT

CAT Transmitter extend a signal link of HDMI / RS232 / IR Remote to this RJ-45 Female connector via CATX(6/6a) category cable. Connector with RJ-45 Output 1 ~ Output 8



HDBaseT Phone-Jack 8P8C Connector: RJ-45 Female connector.

---

7. HDBaseT RS-232 - 1,2,3,4,5,6,7 & 8 CONNECTION

(8)x RS-232 control port to allow for interfacing to a PC. Controls I/O via Switcher HDBaseT Transmitter (8) Rooms each. via this Terminal Block-3pin Female socket for serial RS-232 control.

Remote Port: Terminal Block-3pin Female socket

---

8. HDBaseT LAN CONNECTION

All Tx LAN : Provides Ethernet(LAN) connection from the switcher to All HDBaseT Transmitter (ie. SB-6320T).

ALL HDBaseT Tx LAN Port Connector: HDBaseT Phone-Jack 8P8C, RJ-45 Female socket.

LAN Controls: ***Note: from switcher to HDBaseT Transmitter.***

---

9. IR REMOTE INPUT - 1,2,3,4,5,6,7 & 8 IR SIGNAL FROM ROOM

Support eight of IR Extender to receive signal from eight rooms. Extend cable distance maximum 300M/ ~1000 ft. When you plug the CAT5e/6/7 IR extender into the external port, the room IR receiver remain active.

IR Extender Jack: Female Jack - inner OD O 3.5 mm

---

10. IR REMOTE OUTPUT - 1,2,3,4,5,6,7 & 8 IR SIGNAL FROM ROOM

Support eight of IR Extender to receive signal from eight rooms. Extend cable distance maximum 300M/ ~1000 ft. When you plug the CAT5e/6/7 IR extender into the external port, the room IR receiver remain active.

IR Extender Jack: Female Jack - inner OD O 3.5 mm

---

11. ALL IN : ALL HDBaseT IR REMOTE 1,2,3,4,5,6,7 & 8 (IR SIGNAL TO ROOM)

Support eight of IR remote signals to control to eight rooms via ALL IN port. Extend cable distance maximum 300M / ~1000 ft. When you plug the CAT5e/6/7 IR extender into the external port, the room IR receiver remain active.

IR Extender Jack: Female Jack - inner OD O 3.5 mm

---

12. ALL OUT : ALL HDBaseT IR REMOTE - 1,2,3,4,5,6,7 & 8 (IR SIGNAL FROM ROOM)

Support eight of IR remote signals from eight rooms via ALL OUT port. Extend cable distance maximum 300M / ~1000 ft. When you plug the CAT5e/6/7 IR extender into the external port, the room IR receiver remain active.

IR Extender Jack: Female Jack - inner OD O 3.5 mm

REMOTE CONTROL

Before making any connections to the switcher. Observe the following:

> Ensure the mains voltage supply matches the label on the supplied plug-pack (+/- 10%)

> Ensure that the power switch is OFF

> Ensure that all system grounds (earth) are connected to a common point.

> Avoid powering equipment within a system from multiple power sources that may be separated by large distances

> Connect all audio video sources and destination equipment

> Power up all source and destination audio-visual sources

> For each destination output select the appropriate input source by using the front panel input 1~8 select buttons. The supplied IR remote control. Or through the RS-232 serial communications port.

> Upon power up the switcher will return to its last used setting before powered down.

REMOTE CONTROL

IR REMOTE : SW-5688

IR REMOTE CONTROL KEY :

1. / 2. SWITCH 1 POWER ON or OFF

Controller with a separate power ON and OFF

3. DESTINATION : 1 thru 8 OUTPUT SELECTION

Press the destination button to select the output display channel.

4. SOURCE : 1 thru 8 INPUT SOURCE SELECTION

Press input 1~8 sources with selection button

5. FUNCTION KEY

ALL - function selection button

OFF - function selection button

EDID - function selection button

RECALL - function selection button

MEMORY - function selection button

ENTER - function selection button

LOCK - function selection button

IR REMOTE : SW-5688

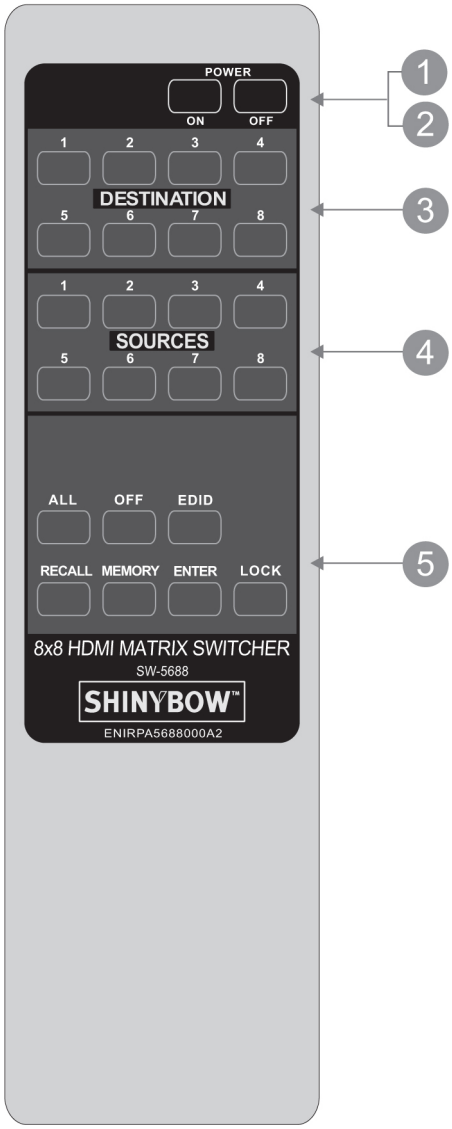

REMOTE PROTOCOL COMMANDS

IR REMOTE CUSTOM AND DATA CODES (NEC Standard)

HOW TO SETUP IR CODES :

CUSTOM CODE : 09F6

POWER ON : 09F6 A15E
POWER OFF : 09F6 A25D

ALL : 09F6 B04F
OFF : 09F6 B14E
EDID : 09F6 B748
LOCK : 09F6 B54A
RECALL : 09F6 B24D
MEMORY : 09F6 B44B
ENTER : 09F6 B34C

PRESS DESTINATION - # then PRESS SOURCE - #

DESTINATION #1 : 09F6 10EF
DESTINATION #2 : 09F6 20DF
DESTINATION #3 : 09F6 30CF
DESTINATION #4 : 09F6 40BF
DESTINATION #5 : 09F6 50AF
DESTINATION #6 : 09F6 609F
DESTINATION #7 : 09F6 708F
DESTINATION #8 : 09F6 807F

SOURCE #1 : 09F6 01FE
SOURCE #2 : 09F6 02FD
SOURCE #3 : 09F6 03FC
SOURCE #4 : 09F6 04FB
SOURCE #5 : 09F6 05FA
SOURCE #6 : 09F6 06F9
SOURCE #7 : 09F6 07F8
SOURCE #8 : 09F6 08F7

For example;
Select Destination # 1 to show Source #1~8,

The IR Data Code list :
Destination # 1 , Source #1 09F6 10EF 09F6 01FE
Destination # 1 , Source #2 09F6 10EF 09F6 02FD
Destination # 1 , Source #3 09F6 10EF 09F6 03FC
Destination # 1 , Source #4 09F6 10EF 09F6 04FB
Destination # 1 , Source #5 09F6 10EF 09F6 05FA
Destination # 1 , Source #6 09F6 10EF 09F6 06F9
Destination # 1 , Source #7 09F6 10EF 09F6 07F8
Destination # 1 , Source #8 09F6 10EF 09F6 08F7

ROOM REMOTE CONTROL #1 ~ #8 CUSTOM CODE AND DATA CODES

IR CUSTOM AND DATA CODES (NEC Standard)

PRESS Number To Select SOURCE
CUSTOM CODE : 09F6

8x8 CAT5e/6 SWITCHER
SW-5688CT-IR01

IR-01 DATA CODE:
SOURCE #1 : 09F6 11EE
SOURCE #2 : 09F6 12ED
SOURCE #3 : 09F6 13EC
SOURCE #4 : 09F6 14EB
SOURCE #5 : 09F6 15EA
SOURCE #6 : 09F6 16E9
SOURCE #7 : 09F6 17E8
SOURCE #8 : 09F6 18E7

8x8 CAT5e/6 SWITCHER
SW-5688CT-IR02

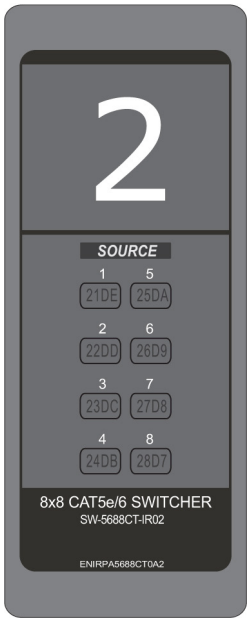

IR-02 DATA CODE:
SOURCE #1 : 09F6 21DE
SOURCE #2 : 09F6 22DD
SOURCE #3 : 09F6 23DC
SOURCE #4 : 09F6 24DB
SOURCE #5 : 09F6 25DA
SOURCE #6 : 09F6 26D9
SOURCE #7 : 09F6 27D8
SOURCE #8 : 09F6 28D7

8x8 CAT5e/6 SWITCHER
SW-5688CT-IR03

IR-03 DATA CODE:
SOURCE #1 : 09F6 31CE
SOURCE #2 : 09F6 32CD
SOURCE #3 : 09F6 33CC
SOURCE #4 : 09F6 34CB
SOURCE #5 : 09F6 35CA
SOURCE #6 : 09F6 36C9
SOURCE #7 : 09F6 37C8
SOURCE #8 : 09F6 38C7

8x8 CAT5e/6 SWITCHER
SW-5688CT-IR04

IR-04 DATA CODE:
SOURCE #1 : 09F6 41BE
SOURCE #2 : 09F6 42BD
SOURCE #3 : 09F6 43BC
SOURCE #4 : 09F6 44BB
SOURCE #5 : 09F6 45BA
SOURCE #6 : 09F6 46B9
SOURCE #7 : 09F6 47B8
SOURCE #8 : 09F6 48B7

ROOM REMOTE CONTROL #1 ~ #8 CUSTOM CODE AND DATA CODES

IR CUSTOM AND DATA CODES (NEC Standard)

PRESS Number To Select SOURCE
CUSTOM CODE : 09F6

8x8 CAT5e/6 SWITCHER
SW-5688CT-IR05

IR-05 DATA CODE:
SOURCE #1 : 09F6 51AE
SOURCE #2 : 09F6 52AD
SOURCE #3 : 09F6 53AC
SOURCE #4 : 09F6 54AB
SOURCE #5 : 09F6 55AA
SOURCE #6 : 09F6 56A9
SOURCE #7 : 09F6 57A8
SOURCE #8 : 09F6 58A7

8x8 CAT5e/6 SWITCHER
SW-5688CT-IR06

IR-06 DATA CODE:
SOURCE #1 : 09F6 619E
SOURCE #2 : 09F6 629D
SOURCE #3 : 09F6 639C
SOURCE #4 : 09F6 649B
SOURCE #5 : 09F6 659A
SOURCE #6 : 09F6 6699
SOURCE #7 : 09F6 6798
SOURCE #8 : 09F6 6897

8x8 CAT5e/6 SWITCHER
SW-5688CT-IR07

IR-07 DATA CODE:
SOURCE #1 : 09F6 718E
SOURCE #2 : 09F6 728D
SOURCE #3 : 09F6 738C
SOURCE #4 : 09F6 748B
SOURCE #5 : 09F6 758A
SOURCE #6 : 09F6 7689
SOURCE #7 : 09F6 7788
SOURCE #8 : 09F6 7887

8x8 CAT5e/6 SWITCHER
SW-5688CT-IR08

IR-08 DATA CODE:
SOURCE #1 : 09F6 817E
SOURCE #2 : 09F6 827D
SOURCE #3 : 09F6 837C
SOURCE #4 : 09F6 847B
SOURCE #5 : 09F6 857A
SOURCE #6 : 09F6 8679
SOURCE #7 : 09F6 8778
SOURCE #8 : 09F6 8877

EDID FUNCTION

EDID FUNCTION FOR HDMI MATRIX SWITCHER

EDID Setup	To Change the EDID Setup
Step 1. Press the **EDID** button	The display will show the currently selected EDID mode
Step 2. Press **SOURCE** #1 or #2 button row	The button will flash blue and the display will show the current **Embedded EDID** Status.
Step 3. Press the **ENTER** button	To set **EDID** mode. The switcher will return to operation mode.
Operation will abort if no keys are pressed within 5 seconds.	

RESET	EDID Return To Factory default
How to RESET EDID mode Press **EDID** > **RECALL** > **ENTER** 	RESET To the FACTORY DEFAULT (1080p-2CH). Press **EDID** button : The LCM will show the current EDID status. Press **RECALL** button : The LCM will show the RESET EDID. Press **ENTER** to confirm entries. The EDID will return to FSS mode and resolution 1080p-2CH.

Embedded EDID Modes	Total 8 EDID Modes
Embedded EDID setup Press **EDID** > **SOURCE** > **ENTER** **SOURCE #1** **or** **SOURCE #2** Select Embedded EDID : Mode 1 : **FSS** Mode 5 : **H36-3D-M** Mode 2 : **H24-3D** Mode 6 : **1280x1024-60Hz** Mode 3 : **H24-3D-M** Mode 7 : **1920x1200-60Hz** Mode 4 : **H36-3D** Mode 8 : **AUTO**	To select Embedded EDID mode or LEARNING mode. Press **EDID** button: The LCM will show the current EDID status. Repeatedly depressing the **Source 1** button will cycle **up** thru the options. Repeatedly depressing the **Source 2** button will cycle **down** thru the options.

LEARNING EDID	Learning EDID from Destination to Source
Learning EDID Setup Press **EDID** > **DESTINATION** > **SOURCE** > **ENTER**	Press **EDID** > **DESTINATION** Button: The LCM will be show LEARNING Switcher will **LEARN** destination HDMI EDID and pass the selected source. **Learning EDID setup for HDMI:** Key Press Sequence: EDID > DESTINATION # > SOURCE # > ENTER The EDID for HDMI has been learned
Press **EDID** > **DESTINATION** > **DESTINATION** > **SOURCE** > **ENTER**	Switcher will **LEARN** destination CATx EDID and pass the selected source. **Learning EDID setup for CATx:** Key Press Sequence: EDID > DESTINATION # > DESTINATION # > SOURCE # > ENTER Again, Press the same DESTINATION # to learn CATx EDID The EDID for CATx has been learned

EDID FUNCTION

NOTE : The already learned EDID cannot be modified. You can only rebuild a new Learning EDID.

For example:

When the Source has “Learned” the EDID data from a destination, It will save that EDID information into EPROM and the EDID data cannot change. Please select new learning destination to sources or change to one of the embedded EDID modes when you want to remove the learning EDID memory from EPRPM.

Mode 1. FSS (Fast Speed Start)

Fast Speed Start mode shortens the startup time of the switcher. Selecting this mode does not force the EDID setup to be cancelled. Users may first select one EDID mode from mode 2 to 3, and then select mode 1 for fast speed start.

Mode 2. H24-3D (1080p-24 bits)

Audio Support : PCM 2CH

Mode 3. H24-3D-M (1080p-24bits)

Audio Support : MAT(MLP) 7.1CH, PCM 2CH, One Bit Audio 2CH, AC-3 5.1CH, DTS 5.1CH, PCM 7.1CH, Dolby Digital + 7.1CH, DTS-HD 7.1CH

Mode 4. H36-3D (1080p-36 bits)

Audio Support : PCM 2CH

Mode 5. H36-3D-M (1080p-36 bits)

Audio Support : MAT(MLP) 7.1CH, PCM 2CH, One Bit Audio 2CH, AC-3 5.1CH, DTS 5.1CH, PCM 7.1CH, Dolby Digital + 7.1CH, DTS-HD 7.1CH

Mode 6. 1280x1024-60Hz (DVI-D)

DVI-D 1280x1024 60Hz

Mode 7. 1920x1200-60Hz (DVI-D)

DVI Support : DVI-D 1920 x 1200 60Hz

Mode 8. AUTO <Default>

All Outputs will be set to the highest common resolution of all connected display devices.

Learning EDID Single to Single	Example : Learn Destination #8 EDID To Source #5.
Step 1. Press **EDID** button	The button will flash blue and the display will show the current **Embedded EDID** Status.
Step 2. Press the Destination #8 button row	Copy the Destination #8 Display EDID.
Step 3. Press the Source #5 button row	Learning the Destination #8 EDID to Source # 5.
Step 4. Press **ENTER** button	To confirm entries.
Learning EDID Single to Multiple	Learning destination EDID link to the majority Sources
Step 1. Press **EDID** button	The button will flash blue and the display will show the current **Embedded EDID** Status.
Step 2. Press the Destinations #1 ~ 8 button row	Copy any 1~8 Destinations EDID.
Step 3. Press the Source #1, #6~#8 button row	Learning the Destination EDID link to Source #1, #6 ~ #8 .
Step 4. Press **ENTER** button	To confirm entries.
Learning EDID Single to ALL	Learning destination EDID link to All Sources
Step 1. Press **EDID** button	The button will flash blue and the display will show the current **Embedded EDID** Status.
Step 2. Press destination button 1 thru 8	Learning anyone 1~8 Destination EDID to all sources.
Step 3. Press **ALL** button	Learning selected destination EDID to all sources.
Step 4. Press **ENTER** button	To confirm entries.

EDID FUNCTION

EDID FUNCTION FOR HDMI MATRIX SWITCHER

EDID Status	To view the current EDID status.
Step 1. Press **EDID** button	The button will flash blue and the display will show the current **Embedded EDID** Status.
Step 2. Press **EDID** button	To exit.
How to setup FSS Function	Fast Speed Start
Step 1. Press the Destination #1~8 button row Then Press the Source #1~8 button row	To setup and Install all devices.
Step 2. Press **EDID** button	Select a optimum status of **Embedded** EDID mode.
Step 3. Press **ENTER** button	To conform entries
Step 4. Press **EDID** button	To select the EDID **FSS** mode.
Step 5. Press **ENTER** button	To confirm entries.
LEARNING EDID Definition	Learning EDID from Destination to Source

1. Switcher will **LEARN** destination EDID and pass the selected source.
2. To set up learning between a single destination and single source:
   Press **EDID** button > Press **Destination** 1 thru 8 > Press **Source** 1 thru 8 > Press **ENTER** to confirm.
   Switcher will learn destination EDID to source device.
3. To set up learning between a single destination and Multiple sources:
   Press **EDID** button > Press **Destination** 1 thru 8 > Press the majority **Sources** 1 thru 8 > Press **ENTER**.
   Switcher will learn single destination EDID to many source devices.
4. How to Learning single destinations with all sources.
   Press **EDID** button > **Press ALL** button > **Press ENTER** to confirm.

Auto Mode Definition	Common Resolution and Audio

Switcher will find highest common Resolution and Audio from all destination EDID to link Source.

Example for single source
Destination > press #1 and then Source > press #1
Destination device #1 will set to the highest common resolution and Audio of source #1

Example for multiple sources
Destination device #1, #2, #3 will be set to the highest common resolution and Audio available and source device #1 will output this same resolution.

TYPICAL APPLICATION

INSTALLING DIAGRAM

Sample connection using IR Transmitters (SB-101) and IR Receiver (SB-100) with SB-6335R & SB-5688LCM-CT to control a projector.

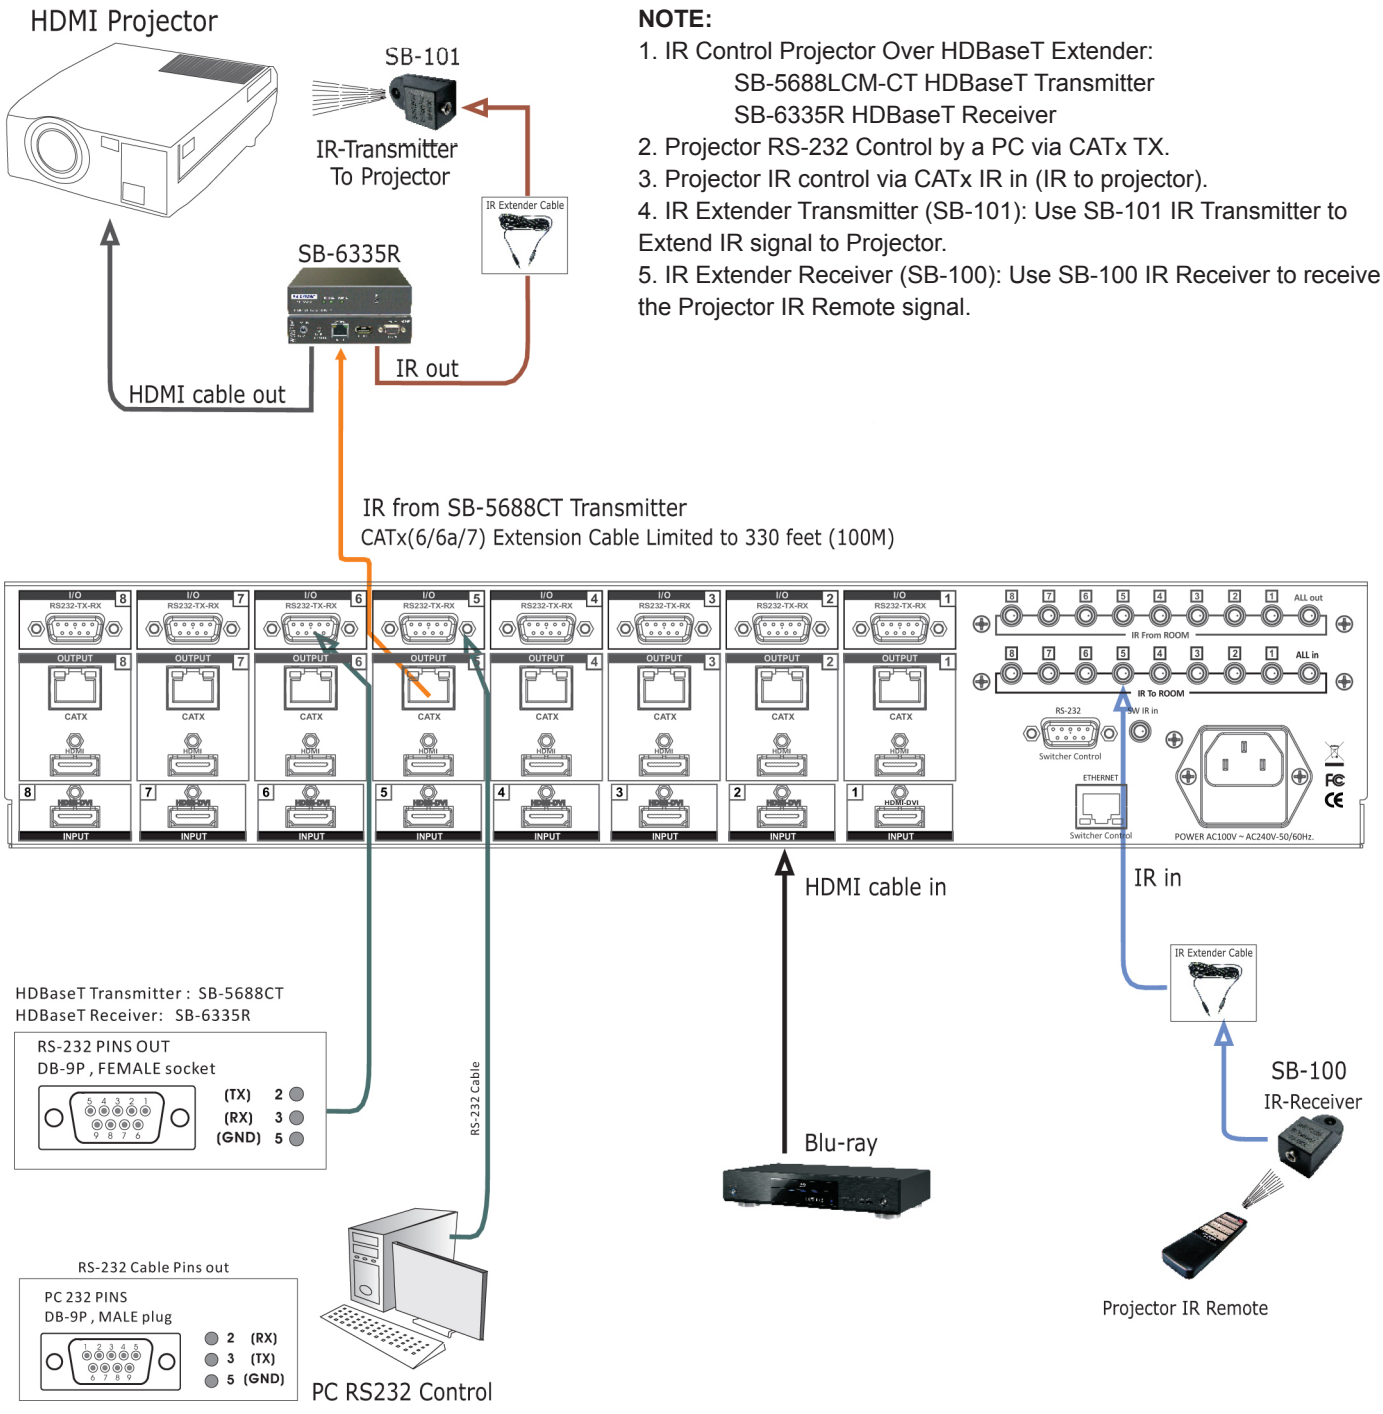

NOTE:

1. IR Control Projector Over HDBaseT Extender:
   SB-5688LCM-CT HDBaseT Transmitter
   SB-6335R HDBaseT Receiver
2. Projector RS-232 Control by a PC via CATx TX.
3. Projector IR control via CATx IR in (IR to projector).
4. IR Extender Transmitter (SB-101): Use SB-101 IR Transmitter to Extend IR signal to Projector.
5. IR Extender Receiver (SB-100): Use SB-100 IR Receiver to receive the Projector IR Remote signal.

TYPICAL APPLICATION

INSTALLING DIAGRAM

Sample connection using IR Transmitters (SB-101) with SB-5688LCM-CT and SB-6335R to control a IR signal from Satellite Receiver.

NOTE:

1. IR Control Satellite Receiver Over HDBaseT CAT5e/6/7 Extender from room:
   SB-5688LCM-CT HDBaseT CAT5e/6/7 Transmitter
   SB-6335R HDBaseT CAT5e/6/7 Receiver
2. Destination RS-232 Control :
   Via SB-5688LCM-CT TX RS-232 in.
3. IR Extender Transmitter (SB-101):
   Use SB-101 IR Transmitter to Extend IR signal

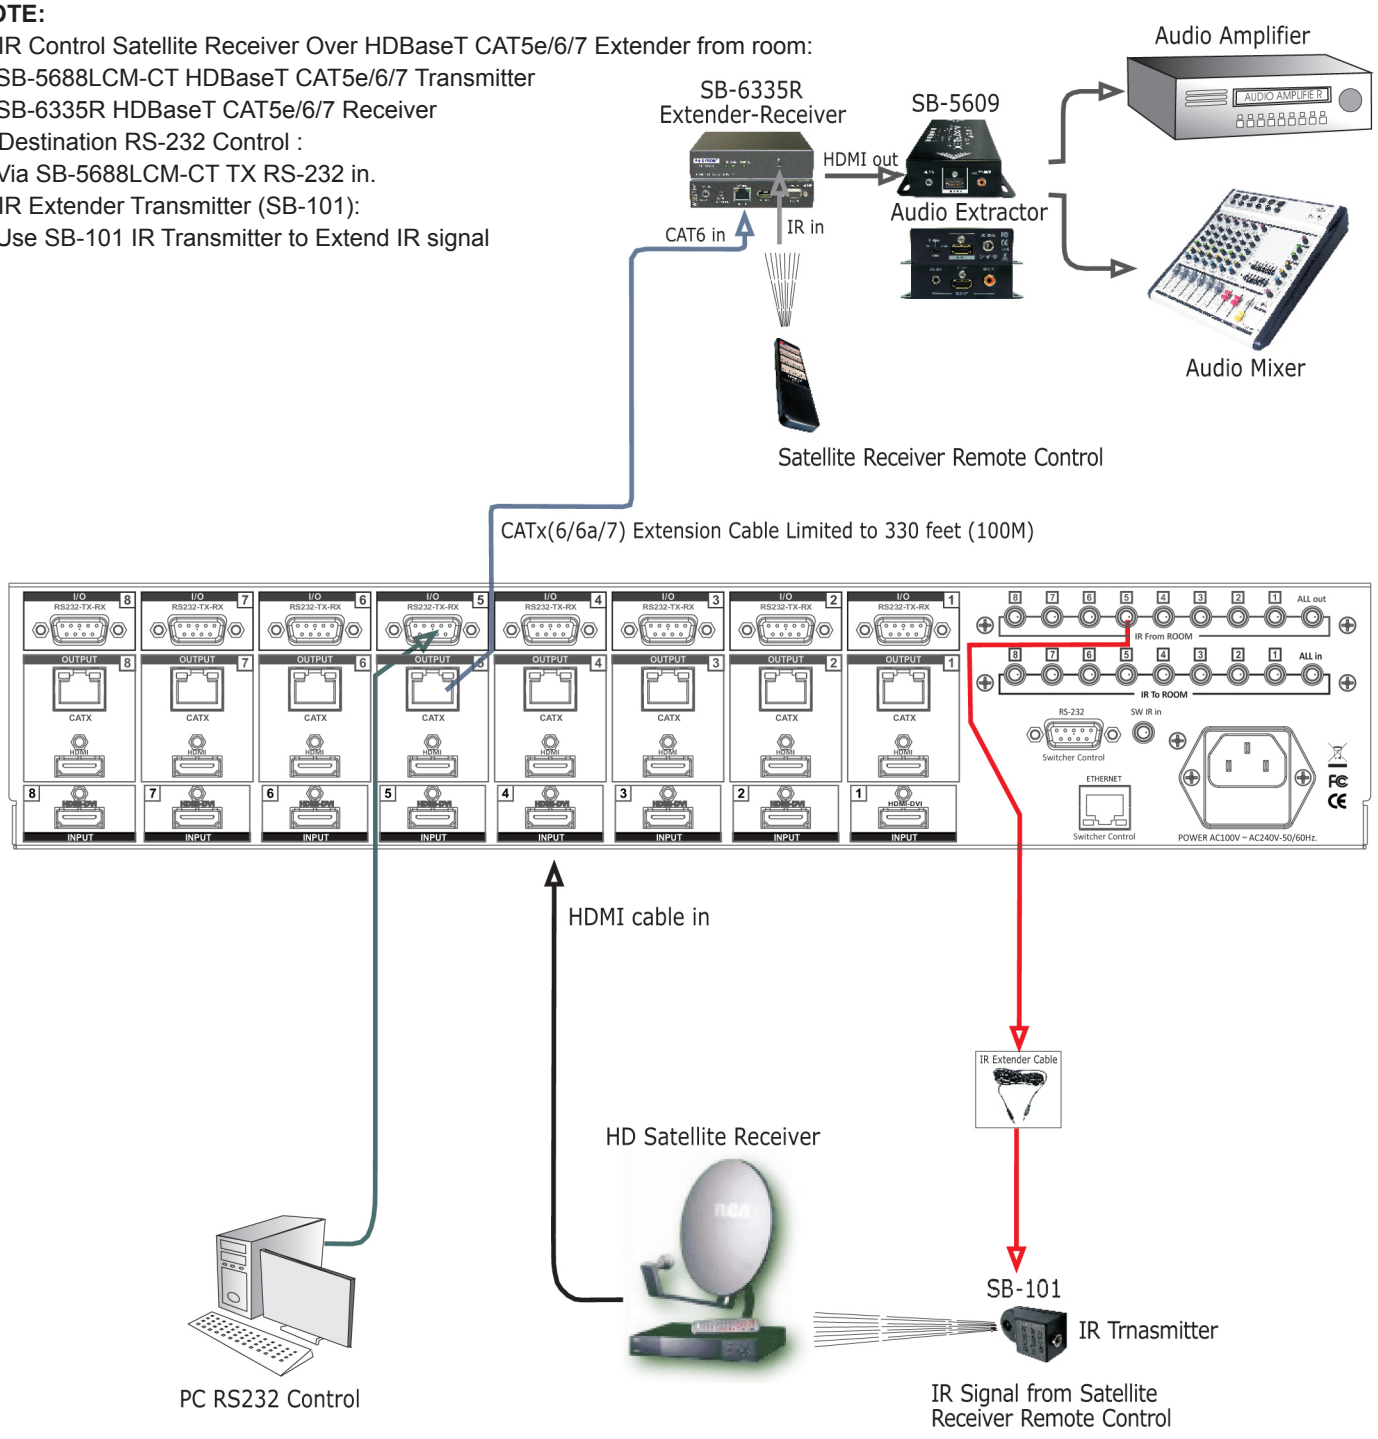

Support HDBaseT Extender by SB-6335T Transmitter and SB-6335R Receiver via CAT5e/6/7 cable.

TYPICAL APPLICATION

INSTALLING DIAGRAM

Sample connection using Audio Extractor to Recode Audio (SB-5609) or to control ARC (SB-5610) and Extend the HDMI signal via HDBaseT Transmitter to IR Receivers (SB-6335R) with SB-5688LCM-CT to extend 100M distance between switcher and destination.

NOTE:

1. Audio Extractor To Recode Audio : SB-5609 HDMI Audio Extractor.
2. Control HDMI ARC: SB-5610 ARC Control Box.
3. Switcher RS-232 Control Via a PC.
4. Switcher IR External port : Via SB-100 IR Extender Receiver.
5. HDMI Display : Signal from Blu-Ray or HD Satellite Receiver.

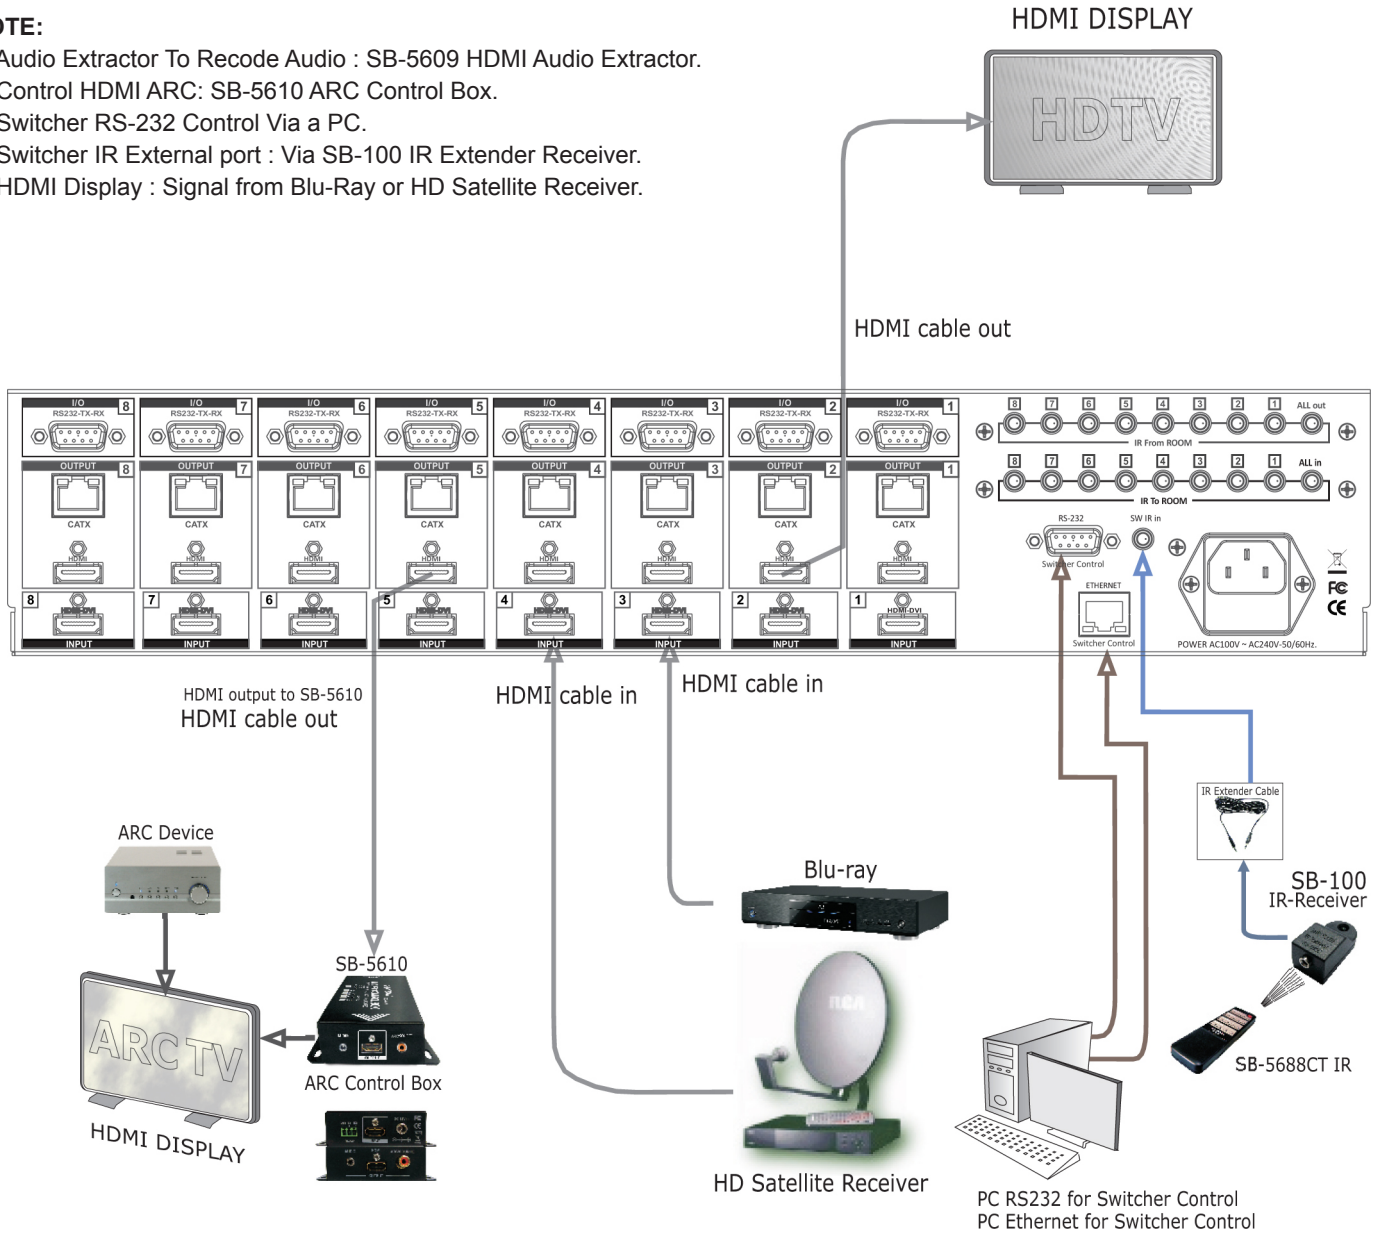

Application HDBaseT IR, RS-232, Multi format Audio and HD Video signals to pass over CAT5e/6/7 cable.

IR EXTENDER

IR RECEIVER:

1. SB-100 IR 300M Receiver

Device Cable (3C) IR Receiver (SB-100)

SB-100 IR Receiver Set

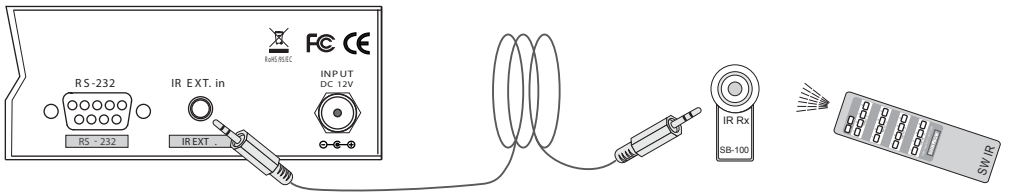

SB-100 Maximum Distance ~ 984 feet (300 meters)

2. SB-100C IR 2M Receiver

Device Cable (3C) IR Receiver (SB-100C)

SB-100C IR Receiver Cable

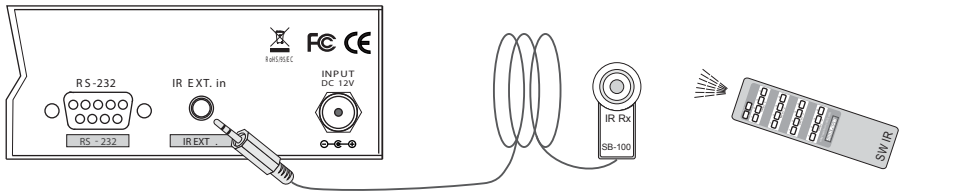

SB-100C Maximum Distance ~ 6 feet (2 meters)

**** When you plug the External IR extender into the switcher, the front panel IR receiver remains active. ****

PIN CONFIGURATION:

SB-100 and SB-100C Receiver Pin configuration

SB-100 IR Receiver Set

Tip: Signal
Ring :VCC
Sleeve: GND

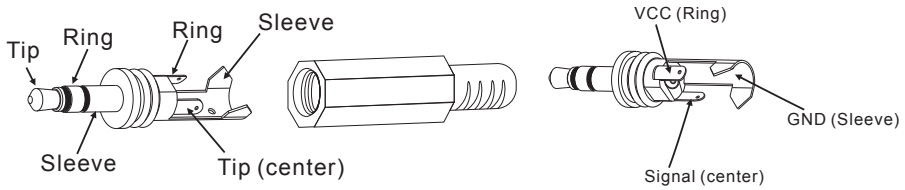

SB-100 Maximum Distance ~ 984 feet (300 meters)

SB-100C IR Receiver Cable

Tip: Signal
Ring: NC
Sleeve: GND

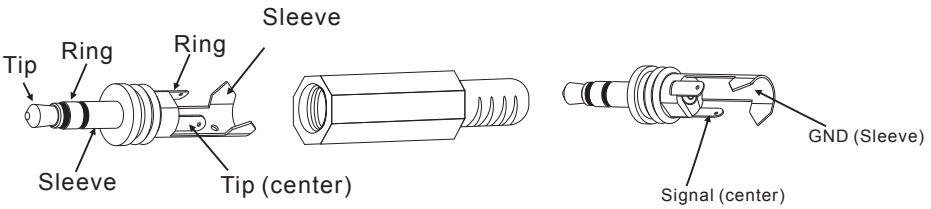

SB-100C Maximum Distance ~ 6 feet (2 meters)

Note: *The External IR jack has voltage on the "Ring" portion of a 3-conductor plug. You must use a 3-conductor plug (aka: stereo plug). Using a 2-conductor plug will short out the power supply. Always make connections with the switcher power off.*

IR EXTENDER

IR EMITTER:

1. SB-101 IR 300M Transmitter

Device Cable (3C) IR Transmitter (SB-101)

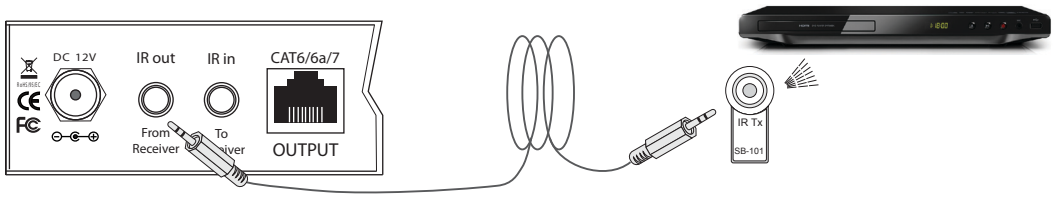

SB-101 Maximum Distance ~ 984 feet (300 meters)

2. SB-101C IR 2M Transmitter

Device Cable (3C) IR Transmitter (SB-101C)

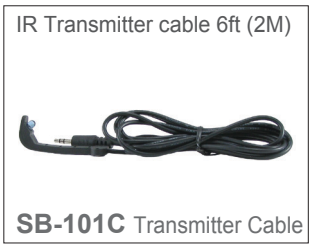

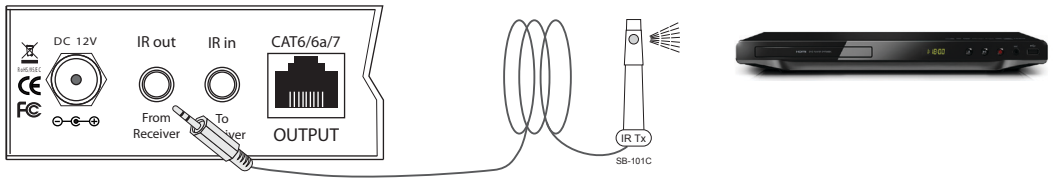

SB-101C Maximum Distance ~ 6 feet (2 meters)

**** When you plug the External IR extender into the switcher, the front panel IR transmitter remains active. ****

PIN CONFIGURATION:

SB-101 and SB-101C Transmitter Pin configuration

Tip: Signal
Ring :VCC
Sleeve: GND

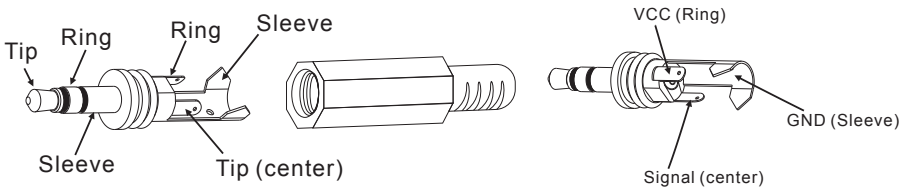

SB-101 Maximum Distance ~ 984 feet (300 meters)

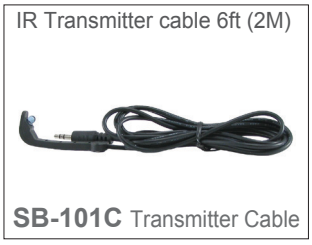

Tip: Signal
Ring: NC
Sleeve: GND

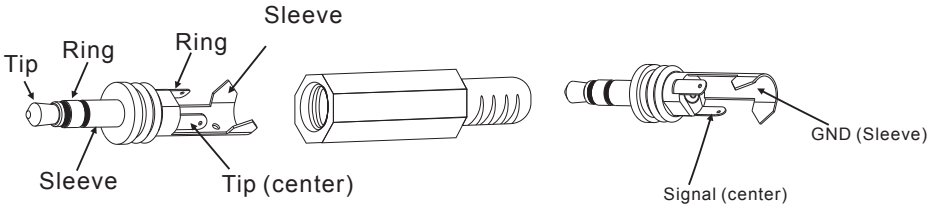

SB-101C Maximum Distance ~ 6 feet (2 meters)

Note: *The External IR jack has voltage on the "Ring" portion of a 3-conductor plug. You must use a 3-conductor plug (aka: stereo plug). Using a 2-conductor plug will short out the power supply. Always make connections with the switcher power off.*

RS-232 SERIAL INTERFACE

RS-232 SERIAL INTERFACE CONNECT a PC or CONTROL SYSTEM. VERSION COMPATIBLE V1.0 & V1.5

For a complete list of commands, please reference external document extended RS-232 Protocol Instruction Manual.

Example of the commanded string to route Input 3 to Output 4

OUTPUT04 03;

RS-232 Configuration

RS-232 cable is a straight thru cable and not null-modem

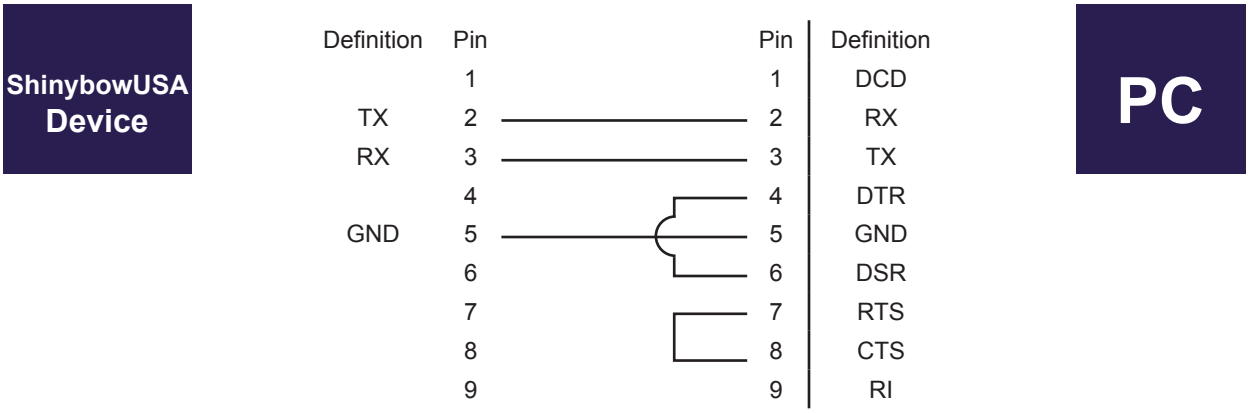

RS-232 Pin Diagram



RS-232 SERIAL INTERFACE PROTOCOL COMMANDS (Ethernet / RS-232 Control driver V2.0)

The Shinybow switcher can be controlled via the RS-232 serial control port to allow for interfacing to a PC, or similar third party control system.

The serial communication parameters are 9600 baud, 8 bit, No Parity and 1 stop bit - this is often referred to as 9600 8N1. When the unit recognizes a complete command it will perform the requested action - there is no delimiter character required.

ETHERNET SERIAL INTERFACE

ETHERNET SERIAL INTERFACE CONNECT A PC OR CONTROL SYSTEM. VERSION COMPATIBLE V2.0

For a complete list of commands, please reference external document extended Ethernet Protocol Instruction Manual.

Example of the commanded string to route Input 3 to Output 4
OUTPUT04 03;

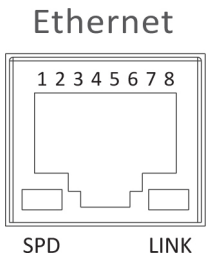

Note :
Control the switcher
SPD : Speed
LINK : Ethernet link
RJ-45 Female 8P-8Cconnector

ETHERNET SERIAL INTERFACE

Pin	Ethernet	Reference
1	TXOP	TX +
2	TXON	TX -
3	RXIP	RX +
4	NC	
5	NC	
6	RXIN	RX -
7	NC	
8	GND	

ETHERNET TCP/IP PROTOCOL COMMANDS (Ethernet / RS-232 Control driver V2.0)

**** The Ethernet port and RS-232 port cannot be used simultaneously.*
*Any connection to the Ethernet Control port will disable serial commands send to the RS-232 port.****

LIMITED WARRANTY

PLEASE READ THE FOLLOWING TERMS AND CONDITIONS CAREFULLY BEFORE USING THIS HARDWARE, COMPONENTS AND SOFTWARE PROVIDED BY, THROUGH OR UNDER SHINYBOWUSA, INC (COLLECTIVELY, THE "PRODUCT"). By using installing or using the Product, you unconditionally signify your agreement to these Terms and Conditions. If you do not agree to these Terms and Conditions, do not use the Product and return the Product to SHINYBOWUSA, Inc. at the return address set forth on the Product's packing label at your expense. SHINYBOWUSA, Inc. may modify these Terms and Conditions at anytime, without notice to you.

RESTRICTIONS ON USE OF THE PRODUCT

It is your responsibility to read and understand the installation and operation instructions, both verbal and in writing, provided to you with respect to the Product. You are authorized to use the Product solely in connection with such instructions. Any use of the Product not in accordance with such instructions shall void any warranty pertaining to the Product. Any and all damages that may occur in the use of the Product that is not strictly in accordance with such instructions shall be borne by you and you agree to indemnify and hold harmless SHINYBOWUSA, Inc. from and against any such damage.

The Product is protected by certain intellectual property rights owned by or licensed to SHINYBOWUSA. Any intellectual property rights pertaining to the Product are licensed to you by SHINYBOWUSA, Inc. and/or its affiliates, including any manufacturers or distributors of the Product (collectively, "SHINYBOWUSA") for your personal use only, provided that you do not change or delete any proprietary notices that may be provided with respect to the Product.

The Product is sold to you and any use of any associated intellectual property is deemed to be licensed to you by SHINYBOWUSA for your personal use only. SHINYBOWUSA does not transfer either the title or the intellectual property rights to the Product and SHINYBOWUSA retains full and complete title to the intellectual property rights therein. All trademarks and logos are owned by SHINYBOWUSA or its licensors and providers of the Product, and you may not copy or use them in any manner without the prior written consent of SHINYBOWUSA, which consent may be withheld at the sole discretion of SHINYBOWUSA.

The functionality and usability of the Product is controlled by SHINYBOWUSA, Inc. from its offices within the State of Texas, United States of America. SHINYBOWUSA makes no representation that materials pertaining to the Product are appropriate or available for use in other locations other than the shipping address you provided with respect thereto. You are advised that the Product may be subject to U.S. export controls.
Disclaimers and Limitation of Liability

SHINYBOWUSA may change or modify the Product at any time, from time to time.

THE PRODUCT IS PROVIDED "AS IS" AND WITHOUT WARRANTIES OF ANY KIND EITHER EXPRESS OR IMPLIED. SHINYBOWUSA DOES NOT WARRANT OR MAKE ANY REPRESENTATIONS REGARDING THE USE OR THE RESULTS OF THE USE OF THE PRODUCT'S CORRECTNESS, ACCURACY, RELIABILITY, OR OTHERWISE.

SHINYBOWUSA has no duty or policy to update any information or statements pertaining to the Product and, therefore, such information or statements should not be relied upon as being current as of the date you use the Product. Moreover, any portion of the materials pertaining to the Product may include technical inaccuracies or typographical errors. Changes may be made from time to time without notice with respect to the Product.

TO THE FULLEST EXTENT PERMISSIBLE PURSUANT TO APPLICABLE LAW, SHINYBOWUSA DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. SHINYBOWUSA DOES NOT WARRANT THE ACCURACY, COMPLETENESS OR USEFULNESS OF ANY INFORMATION WITH RESPECT TO THE PRODUCT. SHINYBOWUSA DOES NOT WARRANT THAT THE FUNCTIONS PERTAINING TO THE PRODUCT WILL BE ERROR-FREE, THAT DEFECTS WITH RESPECT TO THE PRODUCT WILL BE CORRECTED, OR THAT THE MATERIALS PERTAINING THERETO ARE FREE OF DEFECTS OR OTHER HARMFUL COMPONENTS. SHINYBOWUSA WILL USE ITS REASONABLE EFFORTS TO CORRECT ANY DEFECTS IN THE PRODUCT UPON TIMELY WRITTEN NOTICE FROM YOU NOT TO EXCEED 10 BUSINESS DAYS AFTER RECEIPT BY YOU OF THE PRODUCT, BUT YOU (AND NOT SHINYBOWUSA) ASSUME THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR AND CORRECTION THAT WAS CAUSED BY YOU UNLESS OTHERWISE AGREED TO IN A SEPARATE WRITING BY SHINYBOWUSA.

UNDER NO CIRCUMSTANCES, INCLUDING, BUT NOT LIMITED TO, NEGLIGENCE, SHALL SHINYBOWUSA BE LIABLE FOR ANY SPECIAL OR CONSEQUENTIAL DAMAGES THAT RESULT FROM THE USE OF, OR THE INABILITY TO USE THE PRODUCT IN ACCORDANCE WITH ITS SPECIFICATIONS, EVEN IF SHINYBOWUSA OR ITS REPRESENTATIVES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL SHINYBOWUSA'S TOTAL LIABILITY TO YOU FROM ALL DAMAGES, LOSSES, AND CAUSES OF ACTION (WHETHER IN CONTRACT, OR OTHERWISE) EXCEED THE AMOUNT YOU PAID TO SHINYBOWUSA, IF ANY, FOR THE PRODUCT.

END OF DOCUMENT

SHINYBOW™ USA

MULTIMEDIA AUDIO AND VISUAL

www.shinybowusa.com

1399 Wildfire Lane | Frisco, TX 75034

1-877-SHINY-USA 1-877-744-6987 1-972-377-2508 sales@shinybowusa.com